 


AQUAJAM™

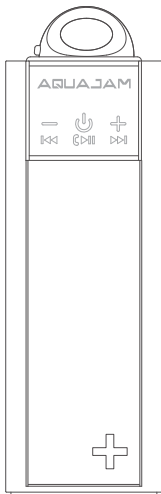

# AJ2<sub>PLUS</sub>

 
---

USER MANUAL


**IMPORTANT!**

THIS PRODUCT IS WATERPROOF ONLY IF THE INSTRUCTIONS ARE FOLLOWED. AVOID SUBMERGING THE PRODUCT BELOW 1M AND ALWAYS ENSURE THAT THE CHARGING CAP IS SECURELY LOCKED BEFORE USE.


The AQUAJAM is an extreme climate, floating, waterproof, full range wireless speaker system with built-in rechargeable battery. Stream & Play your music from your Bluetooth enabled device such as a Smartphone, Tablet or Laptop. Take and make phone calls thanks to the built-in microphone. The design and floatation of the speaker will keep it positioned upright when floating so you can enjoy your music in the pool, bath, lake or sea. Clip on your bike, back-pack or other gear and you have portable all weather music.

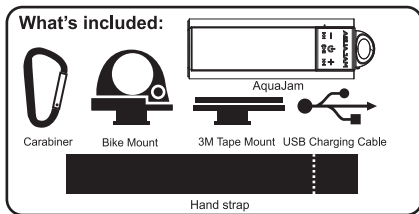

# AQUAJAM™

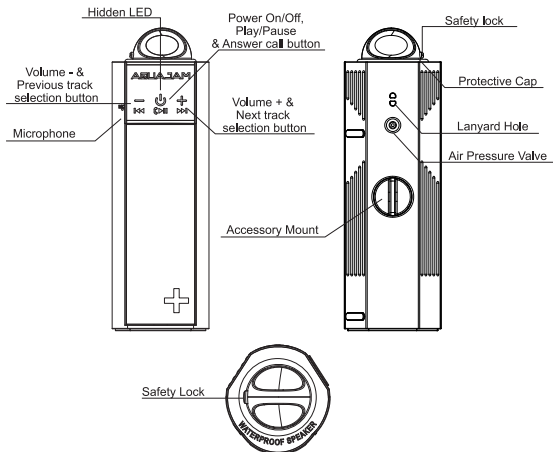 

---

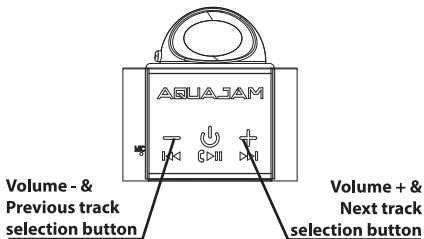 **VOLUME/TRACK SELECTION**

Long press to decrease  
the Volume level

 
Long press to increase  
the Volume level,  
two short beep tones will  
sound when max vol.  
setting is reached

Light press to select  
Previous song track

Light press to select  
Next song track

**NOTE:** You can also control the track and volume on your  
Bluetooth enabled device.

---

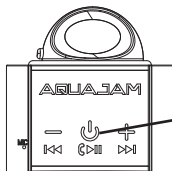**POWER ON/OFF**

**Power On/Off  
Play / Pause &  
Answer call button**

1. Long press the button for approximately 4 seconds a sound prompt will indicate that the unit is powered on.
2. Long press the button for approximately 4 seconds, a sound prompt will indicate that the unit is powering down, the LED will turn off. The unit is powered off.
3. Light press to PLAY or PAUSE the music.
4. Light press to answer incoming calls.

---

### ***PAIRING ONE SPEAKER (MONO MODE)***

1. Power on: Press and hold Power ON/OFF button for 4 seconds a sound prompt will indicate the AQUAJAM is powered on.
2. The AQUAJAM will automatically enter pairing mode and begin searching for other Bluetooth wireless enabled devices.
3. In the Bluetooth settings of your Smartphone, tablet, or media player switch Bluetooth ON and select the option to "Search for Devices".
4. Find & select (tap) "AJ2 PLUS " on your Smartphone/Tablet to complete a successful pairing. (If prompted for a passcode use 0000)
5. Once the pairing is complete you will hear a sound prompt from the speaker.
6. Now navigate to your music player or music app, press play and enjoy your music wirelessly.
7. For reconnection ensure Bluetooth is enabled and then press the ON/OFF button to power the speaker on and it will look for the last paired device first.
8. Long press the - or + Button to adjust the AQUAJAM volume, short press - for previous track and + for next track.

The speaker performance and sound may vary when wet.

\*\*For optimal performance the battery should be fully charged before first use.

---

## **PAIRING TWO SPEAKERS (WIRELESS STEREO)**

 
1. Press the power ON/OFF button which is located at the front of the speaker for a few seconds to power on the units. Tones and voice prompt will sound.
2. Press and hold the + and – buttons at the same time on both units to enter the pairing mode to link each other units.
3. Once wireless audio link is successful a tone will sound to indicate the connection.
4. Long press the power button on the left channel speaker to activate pairing mode to search for any Bluetooth wireless enabled devices.
5. To pair the speakers with your device please follow the pairing procedure as mentioned in Mono mode (Pairing One Speaker).

\*\* The unit will remember the last paired speaker.




---

## ANSWERING CALL/LED INDICATOR

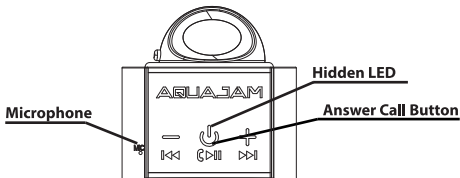


### *Microphone for answering calls:*

- To answer a call press the  button
- Talk over the built in microphone on the side of the unit
- For best results, speak within 50cm (20") of the Microphone during call
- To hang up a call, light press the power button
- If two speaker are paired, use the left channel to control your calls

### *Hidden LED:*

- Red LED will light up during charging, the LED will turn off when charging is completed
- Blue LED will flash when the unit is powered on and is under pairing mode
- Blue LED will flash twice intermittently once pairing is completed and the AQUAJAM is connected to the device
 
## CAP & USB CHARGING CONNECTION

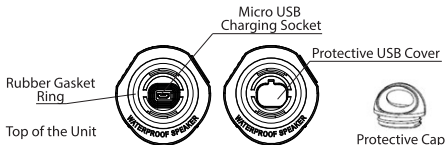


The micro USB port is located under the USB cover, which is in turn is located under the protective cap. Push the safety lock in and unscrew the protective cap and then peel open the protective USB cover to gain access. Ensure both the USB cover and protective cap are firmly locked in place before use.

**Warning:** If the protective cap or the usb cover is off or loosely secured then the speaker is NOT watertight and can cause damage to the speaker. To maintain a watertight seal, make sure the USB cover is firmly sealed and the Protective Cap is attached firmly to the top of the speaker and screwed on tight until the safety lock is engaged.

**Charging the Battery:** Playtime lasts up to 10 hours on a full charge. The built-in Lithium Ion battery uses the included USB cable to recharge for optimal charging connect the USB cable to your computer or any USB wall or car adapter that outputs a minimum of 5V @1Amp or higher. The red LED will be solid during charging and turn off when charging is complete. When battery energy is low, a sound prompt will indicate with 30 minutes of approximate playtime remaining.

## ACCESSORY MOUNTS

 The AQUAJAM comes with a 3M multipurpose mount and a Bike Mount.

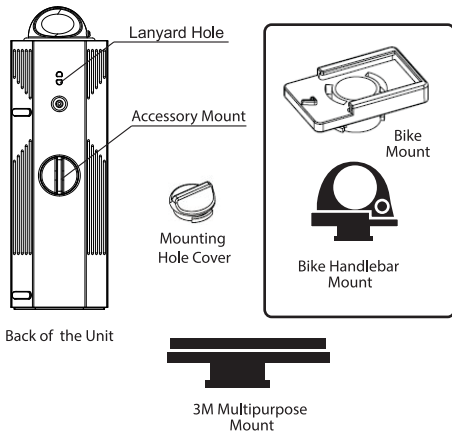

---

## ***INSTALLING THE 3M MULTIPURPOSE MOUNT***

THE 3M MOUNT IS AN INDUSTRIAL STRENGTH WATERPROOOF MOUNT.

It can be used on a variety of surfaces and in outdoor environments.

1. To install a mount remove the mounting hole cover by unscrewing it from the speaker.
2. Once the cover is removed take the Mount and twist it 90 degrees in a anticlockwise motion into the accessories mounting hole. Make sure the mount is securely attached to the speaker.
3. Apply the mount to a smooth, and fully cleaned surface. A textured surface or any imperfections to a smooth surface can keep the adhesive from making a strong bond.
4. Firmly press the mount into place ensuring full contact over the entire surface area.
5. Be sure to apply the mount at room temp, and also allow at least 24 hours for the mount to properly adhere to the surface.

To remove the adhesive mounts, you can use a hairdryer or heat gun to soften the adhesive and slowly peel it back. Please note that you will not be able to reuse an adhesive mount once you remove it.

---

## **NOTES**

- If you are mounting the speaker onto a surboard don't mount to soft-top boards as they are porous and the mount will not adhere properly.
- It is typically not recommended to use adhesive mounts on skis or snowboards as the flex and vibration caused can sometimes lead to the mount coming loose. Failure to follow these guidelines may result in loss or damage of your speaker, which is not covered under warranty.
- The performance of the 3M multipurpose mount may vary due to extreme environment such as constantly high humidity or moisture. Please check that the 3M mount is securely placed on the surface before use.

---

## **INSTALLING THE BIKE MOUNT**

1. Use a (Philips) screwdriver to fasten the bike mount onto the handlebar of the bicycle. Depending on the size of your handlebar frame you can insert the pads provided to ensure a tight fit.
2. Fasten the speaker onto the mount by rotating 90 degrees anticlockwise.

---

## **TIPS TO GET THE BEST RECEPTION AND AUDIO QUALITY**

To get the best stereo quality, the distance between two paired speakers should not exceed 5M.

---

## ***TIPS TO GET THE BEST RECEPTION AND AUDIO QUALITY***

### **Bluetooth Wireless Range In A Dry Environment**

The AQUAJAM has a wireless range of up to 10 metres. To get the best reception ensure there is a clear line of sight between your AQUAJAM and your bluetooth enabled device. Obstructing objects between your AQUAJAM and your device may compromise the range and cause interference with your connection. For best results ensure that your phone is pointed directly at the AQUAJAM logo on the front face of the unit. To get the best audio quality, ensure the speaker grill is facing you and The unit is either positioned on its side grips or upright on the base grip.

### **Bluetooth Wireless Range In A Wet Environment**

As water absorbs bluetooth signals the wireless range will lessen when the AQUAJAM comes into contact with water. To maximise the range ensure that there is a clear line of sight between your Bluetooth enabled device and the AQUAJAM.

The AQUAJAM is designed to float. To enjoy the best audio quality try to avoid unnecessarily submersing the product.  
Do not submerge the product below 1 meter .

### **Audio Quality In A Wet Environment**

If water enters the speaker grill the audio quality will be temporarily compromised. To resume normal sound hold the speaker upright allowing for the water to drain out of the grill. The speaker should dry up quickly and normal audio quality will be restored.

---

## **TROUBLESHOOTING**

### **1. The speaker doesn't play**

- Press the power button and make sure the unit is powered on.
- Make sure the speaker is charged. If you are not sure that the battery is charged attach the charging cable to the AQUAJAM and plug the other end into any active USB port.
- If connected wirelessly check status of the device that is connected. Make sure that the AQUAJAM is paired - connected and that the media is playing.
- Try turning the power Off then back On.

### **2. Poor sound quality and static**

- Charge the battery
- The system is designed to operate at a range of 10 meters. However, performance can be diminished by obstacles such as walls or metal, and may also be affected by other Bluetooth® devices. Try moving the AQUAJAM speaker closer to the Bluetooth® device.

---

## TROUBLESHOOTING

### 3. Unsuccessful Pairing

Bluetooth implementation varies depending on your device's hardware and operating system.

- When you power ON the speaker, it will automatically link with the last previously paired Bluetooth device if the device is still within range (about 10 meter). To pair with a different device, disconnect the speaker from your paired device.
- If your device does not auto-link when within range, re-pair the device. To do so, first delete AJ2 Plus from your Bluetooth devices menu, then follow the pairing instruction to reconnect.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.
- Reconnect your Bluetooth device to the speaker if you've recently deactivated Bluetooth on the device. Go over the settings on your device and confirm they're set up to stream over Bluetooth.



---

## ***TROUBLESHOOTING***

### **Still need help?**

One of our AQUAJAM technical support specialists can assist you with your issue.

To reach us please contact the AQUAJAM support team and send an e-mail to the [support@aquajam.com](mailto:support@aquajam.com) e-mail address.

---

## ***CARE & PRECAUTIONS***

1. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
2. For protection during lightning storm, unplug the speakers from the electrical outlet and turn off the computer.
3. Unplug this apparatus when unused for long periods of time.
4. Place the AQUAJAM in a stable location so that it will not fall causing damage to the speakers or bodily harm.
5. Ensure that the protective USB cover is firmly in place and the protective cap is locked on before use.

---

**CARE & PRECAUTIONS**

6. Dry unit completely before opening the cap. Do NOT open the cap if wet or in a wet environment. Do NOT use or store the unit in places with high temperature.
7. Avoid direct exposure to sunlight and strong magnetic fields.
8. Periodically check the rubber gasket ring on the unit for premature wear.
9. Periodically clean the rubber gasket ring with a soft moist cloth. Do not use any oily solvent or chemi-cals for cleaning.
10. Rinse off the unit with tap water after use in salt water or swimming pool.
11. Audio distortion may occur when the batteries are nearing end of charge.
12. Avoid hard impact of the handle bar when a speaker is attached on the bike mount; the speaker may be detached & damaged.

AQUAJAM™



<http://www.aquajam.com/>